



Tosaerba falciatutto 53 cm.
Sichel-Mülchmäher 53 cm.
Grassland mower 53 cm.
Tondeuse débroussailleuse de 53 cm.
Cortacésped 53 cm.

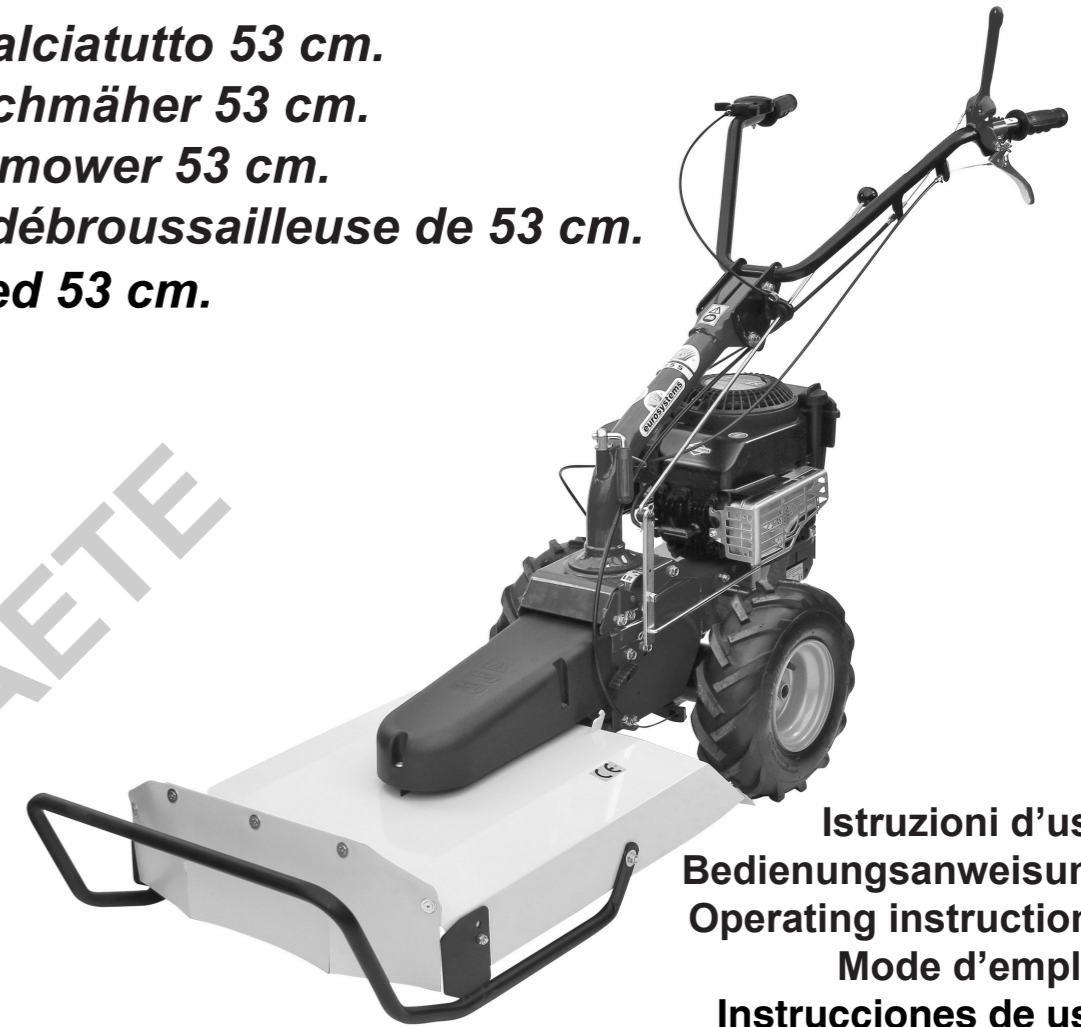

Istruzioni d'uso
Bedienungsanweisung
Operating instructions
Mode d'emploi
Instrucciones de uso

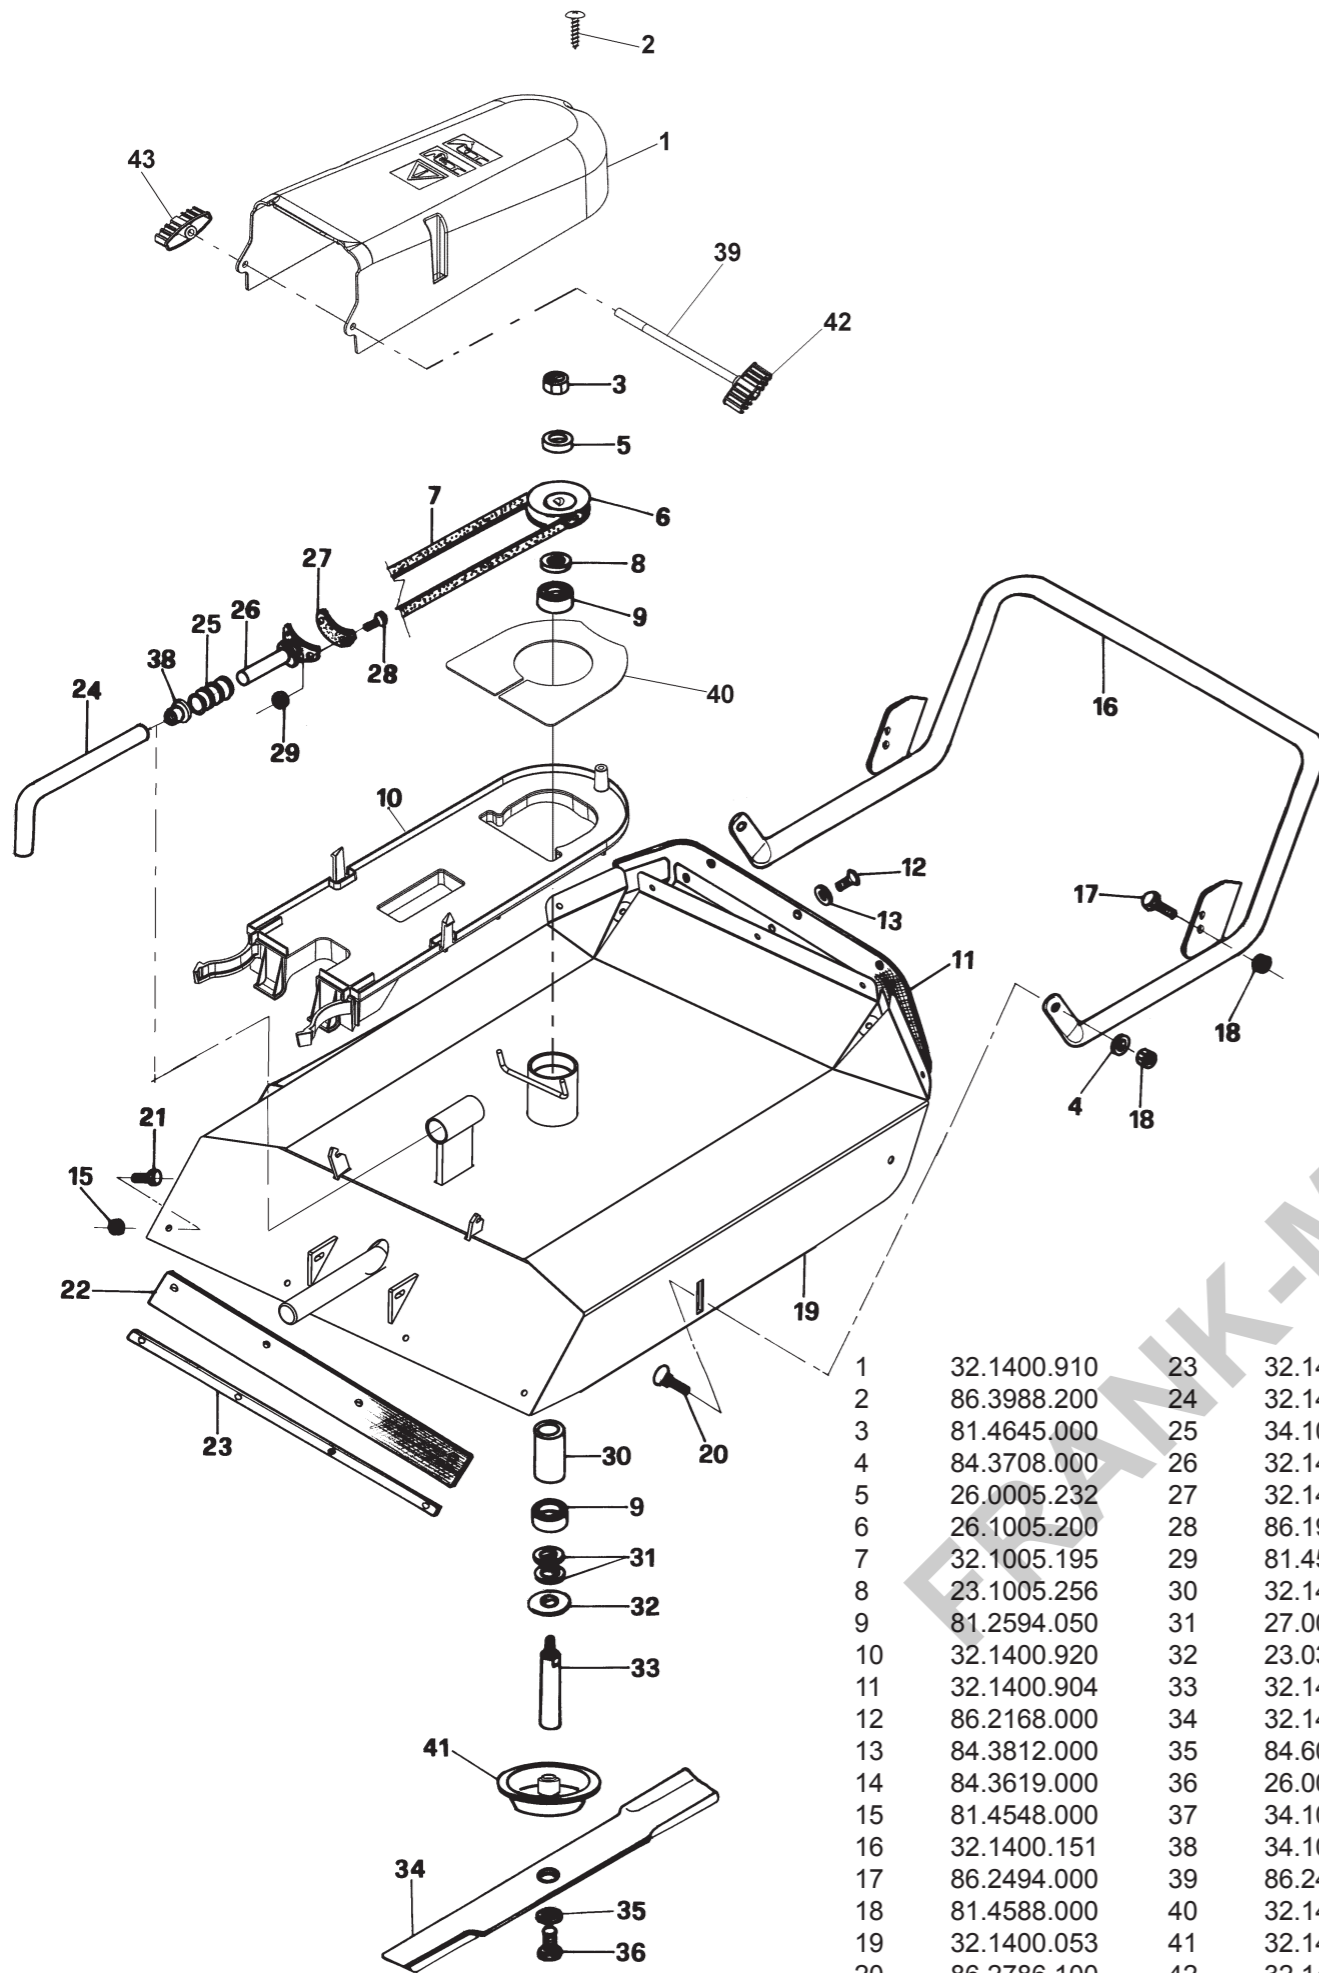

1	32.1400.910	23	32.1400.142
2	86.3988.200	24	32.1400.248
3	81.4645.000	25	34.1010.320
4	84.3708.000	26	32.1400.270
5	26.0005.232	27	32.1400.260
6	26.1005.200	28	86.1929.100
7	32.1005.195	29	81.4517.010
8	23.1005.256	30	32.1400.222
9	81.2594.050	31	27.0013.596
10	32.1400.920	32	23.0330.209
11	32.1400.904	33	32.1400.215
12	86.2168.000	34	32.1400.227
13	84.3812.000	35	84.6000.300
14	84.3619.000	36	26.0050.201
15	81.4548.000	37	34.1012.128
16	32.1400.151	38	34.1012.304
17	86.2494.000	39	86.2471.800
18	81.4588.000	40	32.1400.915
19	32.1400.053	41	32.1400.230
20	86.2786.100	42	32.1400.300
21	86.1998.000	43	32.1400.301
22	32.1400.906		

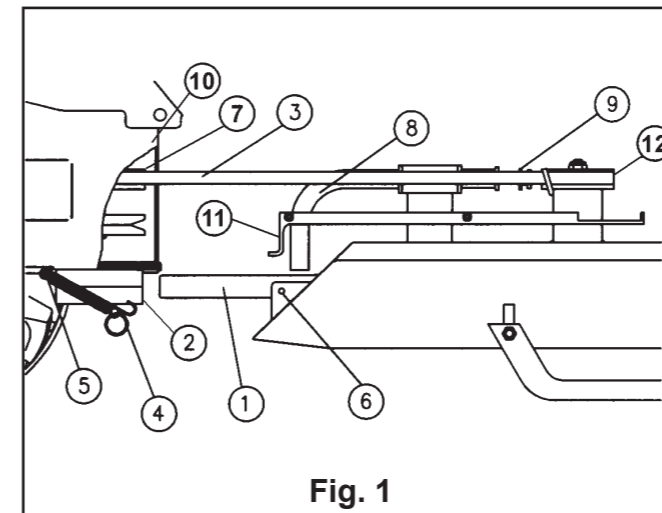


Fig. 1

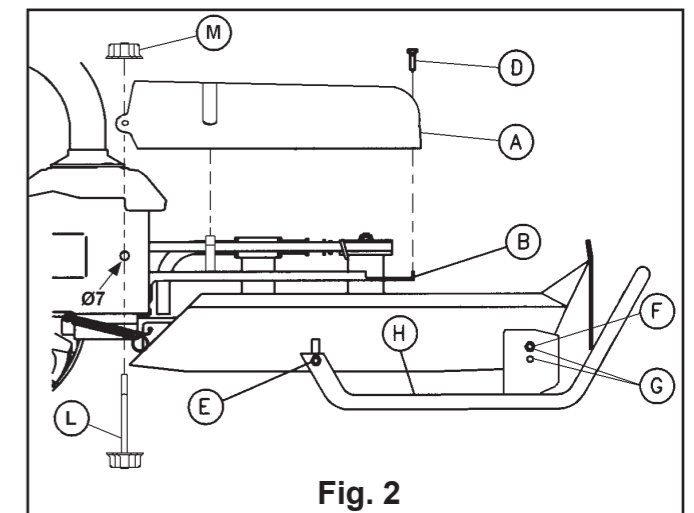


Fig. 2

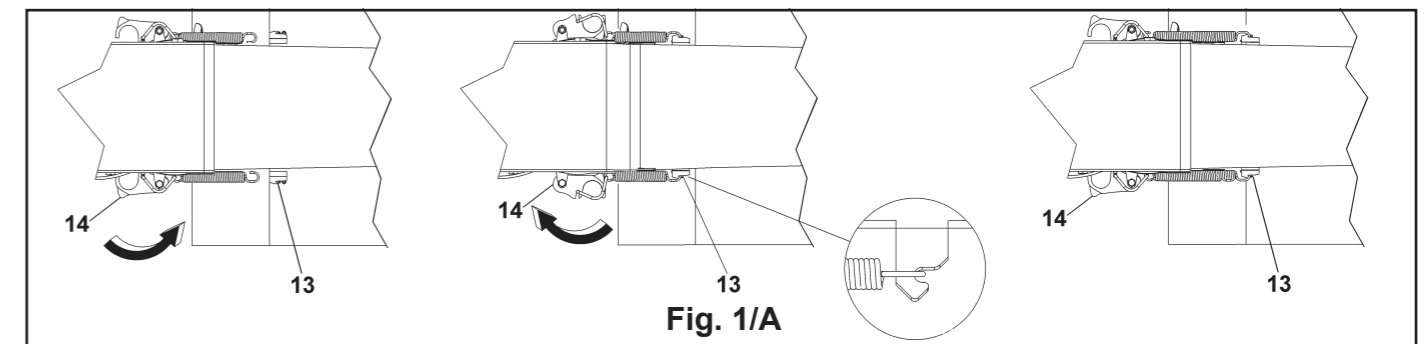


Fig. 1/A



Attenzione: pericolo ferimento arti. Parti rotanti.
 Warning: risk of limb injury. Rotating parts!
 Attention! Danger de blessures aux membres. Parties tournantes.
 Achtung: Gliederverletzung Drehende Teile.
 Atención: peligro heridas a extremidades. Piezas giratorias.

